

SPARE PARTS LIST

File:

Version: 1.0

Date: 5th June ,2018

Pos. No	Part code	English	QTY	losable	damage-able	Consum-able	Remark
1	8SBABC04-20	screw	4				
2	8069-900002	back cover	1				
3	8SBABC04-16	screw	22				
4	8030-900001	washer1	1				
5	8053-900005	front finger guard	1				
6		nameplard	1				
7		warning laber	1				
8	8001-900001	left housing	1				
9	8072-900001	brake block	1				
10	8SBABC04-16	screw	2				
11	8036-920001	brush holder	1				
12	8023-920001	carbon brush cover	2				
13	8035-930001	carbon brush	2				
14	8DB-60802	bearing	1				
15	8SBABC04-10	screw	2				
16	8030-900003	field	1				
17	8053-900004	wind screen	1				
18	8013-900004	armature	1				
19	8077-920002	woodruff key	1				
20	8031-900001	brake wheel	1				
21	8SBABC04-10	screw	5				
22	8030-900003	washer3	2				
23	8072-900002	block	1				
24	8060-900002	extension spring	1				
25	8050-900001	brack hinge	1				
26	8060-900001	extension spring	1				
27	8038-900001	oil pipe 1	1				
28	8160-900001	oil pump housing assembl	1				
28-1	8146-131001	oil pump housing	1				
28-2	8028-900001	rubber gasket	1				
28-3	8023-900003	oil pump sets	1				
29	8160-900002	oil pump core assembly	1				
29-1	8146-900002	oil pump core	1				
29-2	8138-900004	oil pump pin	1				
29-3	8052-900003	oil pump gear	1				
29-4	8025-900003	o type ring	1				
30	8038-900002	oil pipe 2	1				

