

# PARTS LIST

MC2630RS

## CONTENTS

1. MAIN BODY .....	1 ~ 2
2. ENGINE .....	3 ~ 6
3. CARBURETOR, FUEL TANK .....	7 ~ 8
4. ACCESSORIES .....	9 ~ 10





2016. 12.



**MARUYAMA**


P/N 524179-2

1. MC2630RS  
MAIN BODY

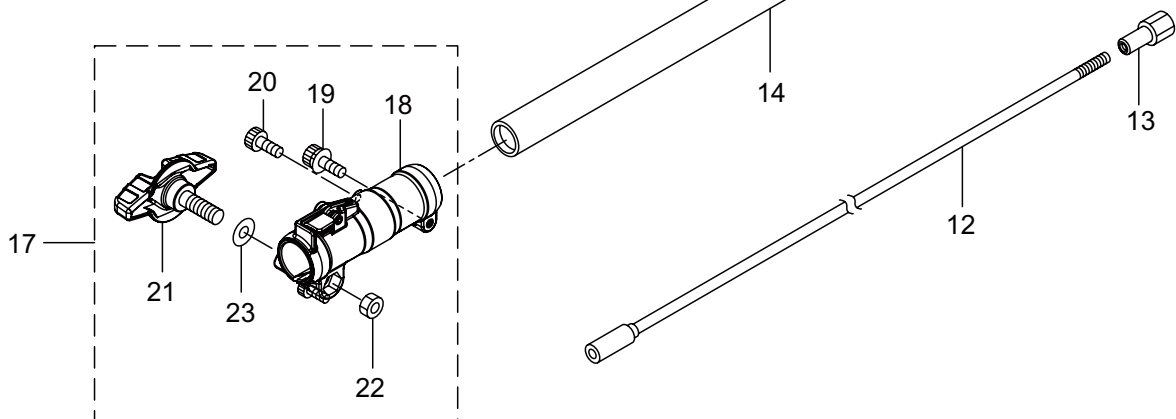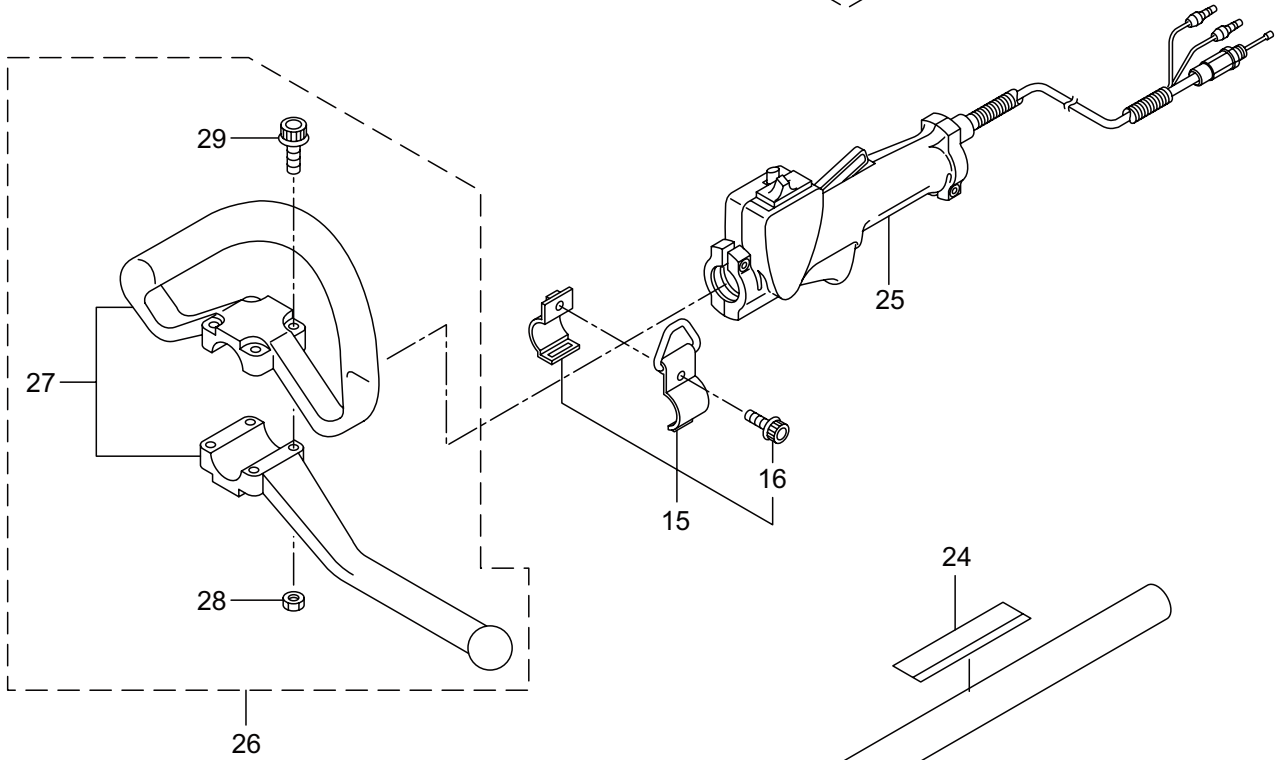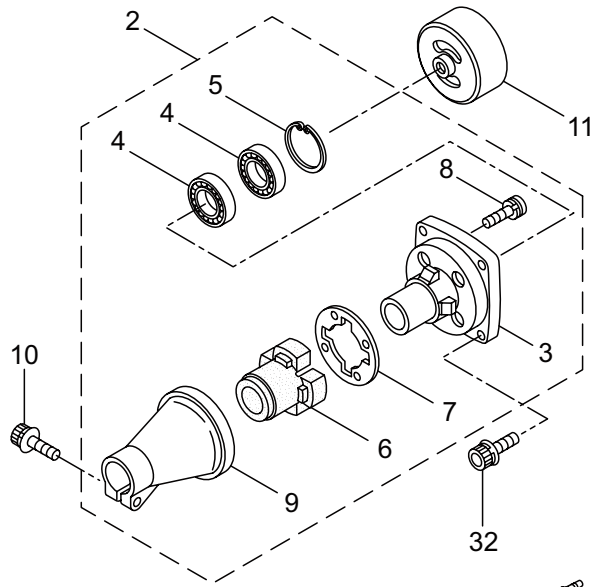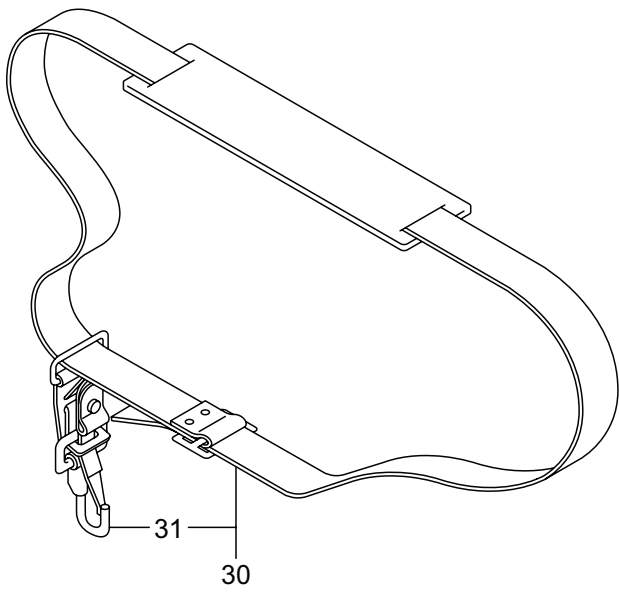


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	364566	MC2630RS	1	
1-2	215512	Clutch Case Ass'y	1	Incl.3-9
1-3	214592	Bearing Case	1	
1-4	214161	Bearing	2	#6000ZZ
1-5	054676	Snap Ring	1	#26
1-6	560309	Buffer	1	
1-7	214163	Washer	1	
1-8	092033	Screw	4	M5x15
1-9	214593	Driveshaft Tube Adapter	1	
1-10	261246	Cap Screw	1	M5x25
1-11	229091	Clutch Drum	1	
1-12	236836	Driveshaft Ass'y	1	
1-13	211464	Upper Adapt	1	
1-14	236837	Driveshaft Tube	1	
1-15	215533	Hanging Bracket Ass'y	1	Incl.16
1-16	261762	Cap Screw	1	M5x14
1-17	237165	Joint Pipe Ass'y	1	Incl.18-23
1-18	237166	Joint Pipe	1	
1-19	261246	Cap Screw	1	M5x25
1-20	283139	Screw	1	M5x12
1-21	236962	Knob	1	M8x26
1-22	126990	Nut	1	M8
1-23	550131	Washer	1	M8
1-24	238126	Label	1	MC2630RS
1-25	235078	Throttle Trigger	1	
1-26	231955	Loop Handle Ass'y	1	Incl.27-29
1-27	225699	Loop Handle	1	
1-28	081027	Nut	4	M5
1-29	215608	Cap Screw	4	M5x30x16
1-30	220533	Hanging Strap Ass'y	1	Incl.31
1-31	231657	Hook	1	
1-32	261250	Cap Screw	4	M5x20

2. MC2630RS  
ENGINE

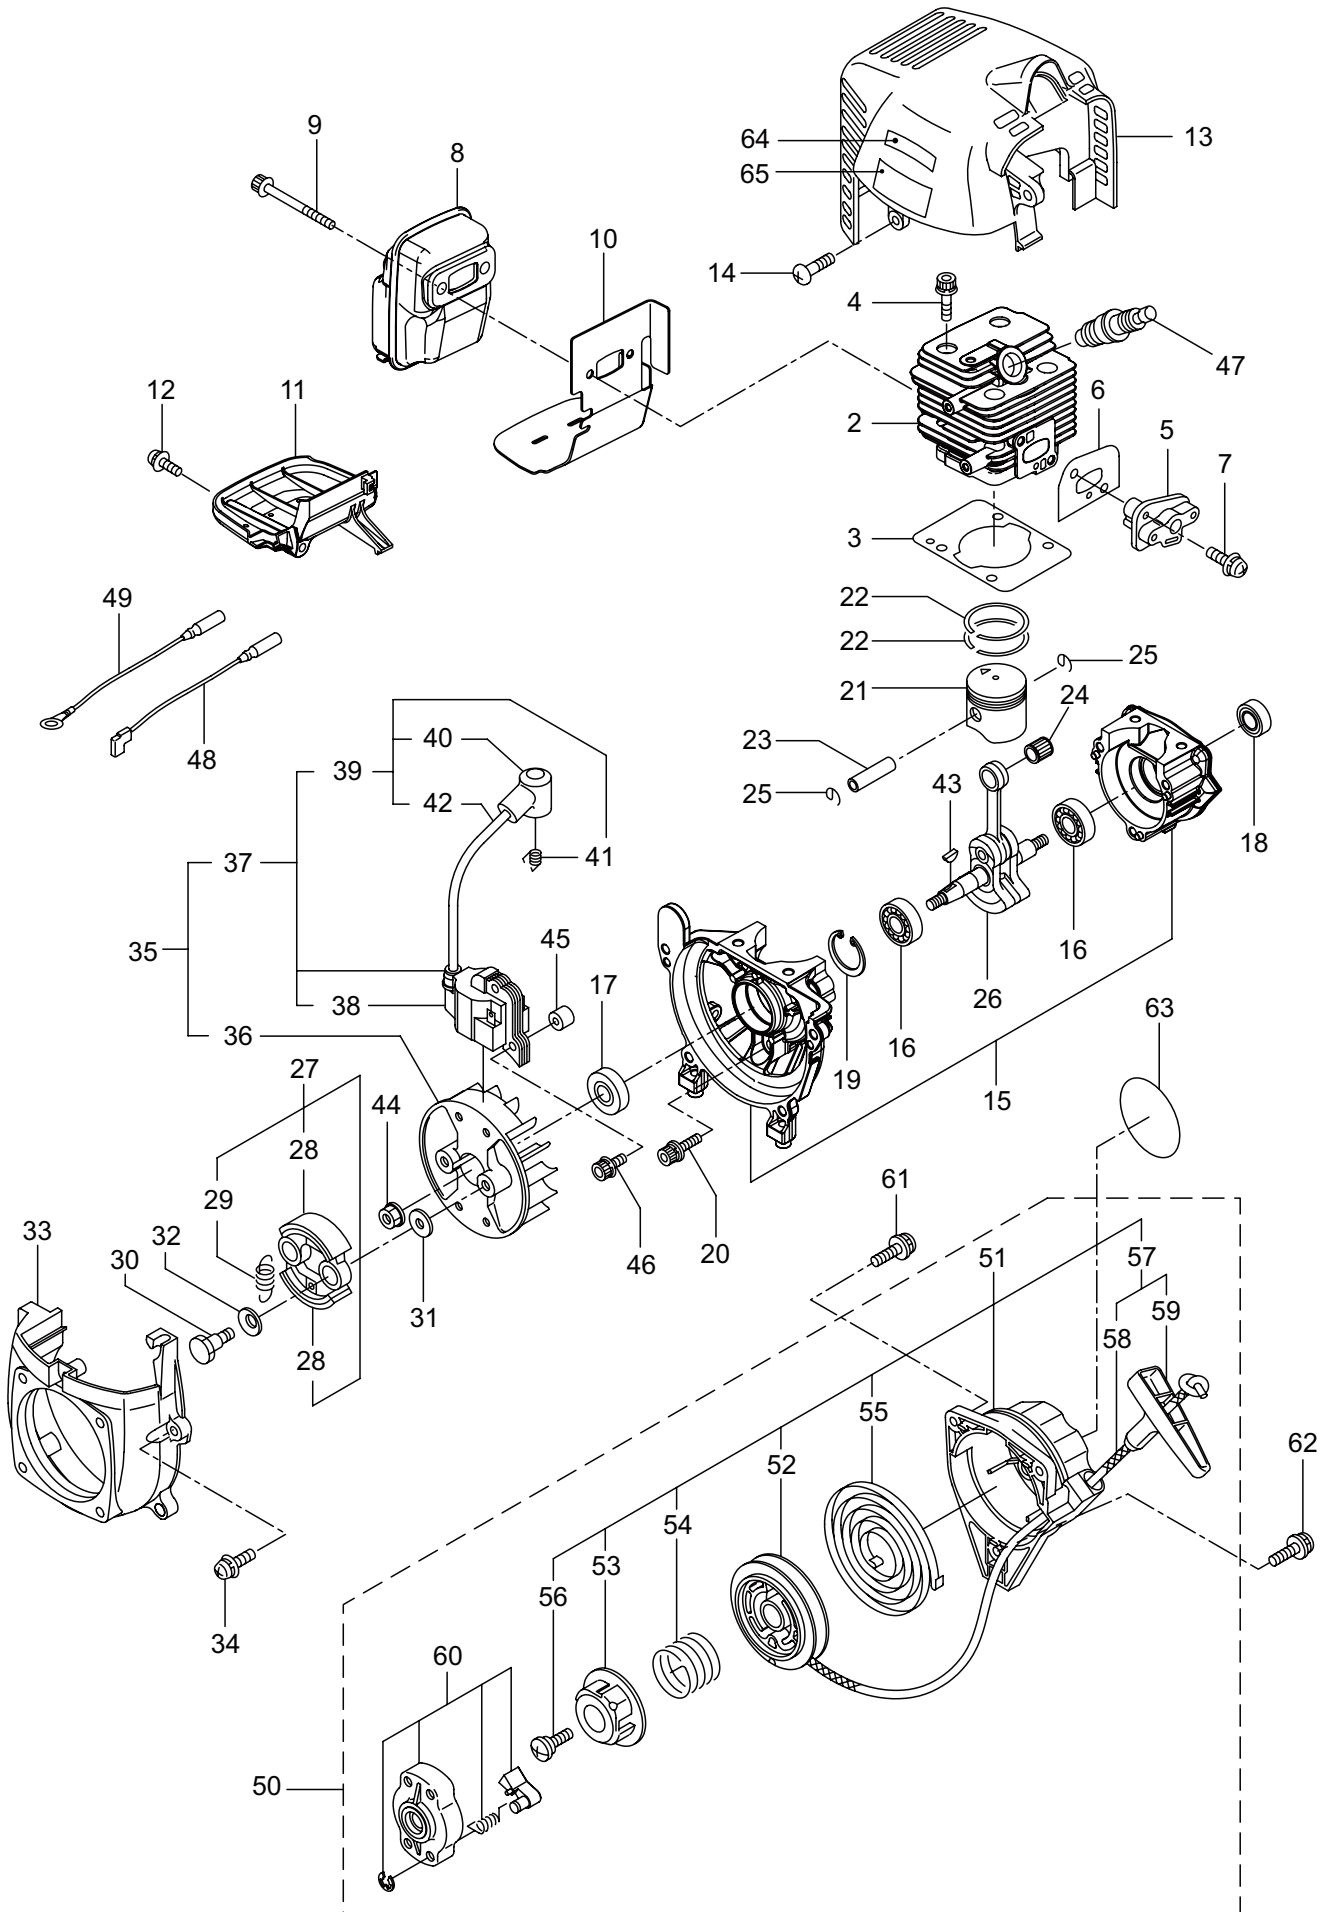


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	859841	Engine	1	EE262/02
2-2	273153	Cylinder	1	
2-3	282330	Gasket	1	
2-4	261250	Cap Screw	4	M5x20
2-5	282579	Insulator	1	
2-6	267049	Gasket	1	
2-7	269826	Screw	2	M5x25
2-8	276315	Muffler Ass'y	1	
2-9	266402	Cap Screw	2	M5x55
2-10	273147	Gasket	1	
2-11	273618	Under Cover	1	
2-12	269827	Screw	1	M5x16
2-13	276319	Top Cover	1	
2-14	280144	Tapping Screw	1	
2-15	273673	Crankcase	1	
2-16	280488	Bearing	2	PPL 6001
2-17	261492	Oil Seal	1	ISCD12287
2-18	261386	Oil Seal	1	ISCD12227
2-19	055185	Snap Ring	1	#28
2-20	261612	Cap Screw	3	M5x30
2-21	273155	Piston	1	
2-22	261496	Piston Ring	2	(2)Required
2-23	261497	Piston Pin	1	
2-24	261037	Bearing,Needle	1	KBK8x11x11.8x1
2-25	261576	Clip,Piston	2	
2-26	282323	Crankshaft/Conn.Rod Ass'y	1	
2-27	269168	Clutch Ass'y	1	Incl.28,29
2-28	269169	Clutch Shoe	2	(2)required
2-29	269173	Spring, Clutch	1	
2-30	269647	Clutch Bolt	2	
2-31	269175	Washer	2	6.1x15x1.6
2-32	261777	Wave Washer	2	
2-33	283386	Fan Cover	1	
2-34	269831	Screw	4	M5x20
2-35	282692	Magneto Ass'y	1	Incl.36-42
2-36	261356	Rotor/Fan	1	
2-37	282693	Ignition Coil Ass'y	1	Incl.38-42
2-38	267401	Coil	1	
2-39	282694	Spark Plug Wire Ass'y	1	Incl.40-42
2-40	261074	Plug Boot	1	
2-41	261075	Connector	1	
2-42	282695	Spark Plug Wire	1	
2-43	261076	Woodruff Key	1	3x10
2-44	261417	Nut,Rotor	1	M8
2-45	280381	Spacer	2	

## 2. MC2630RS ENGINE

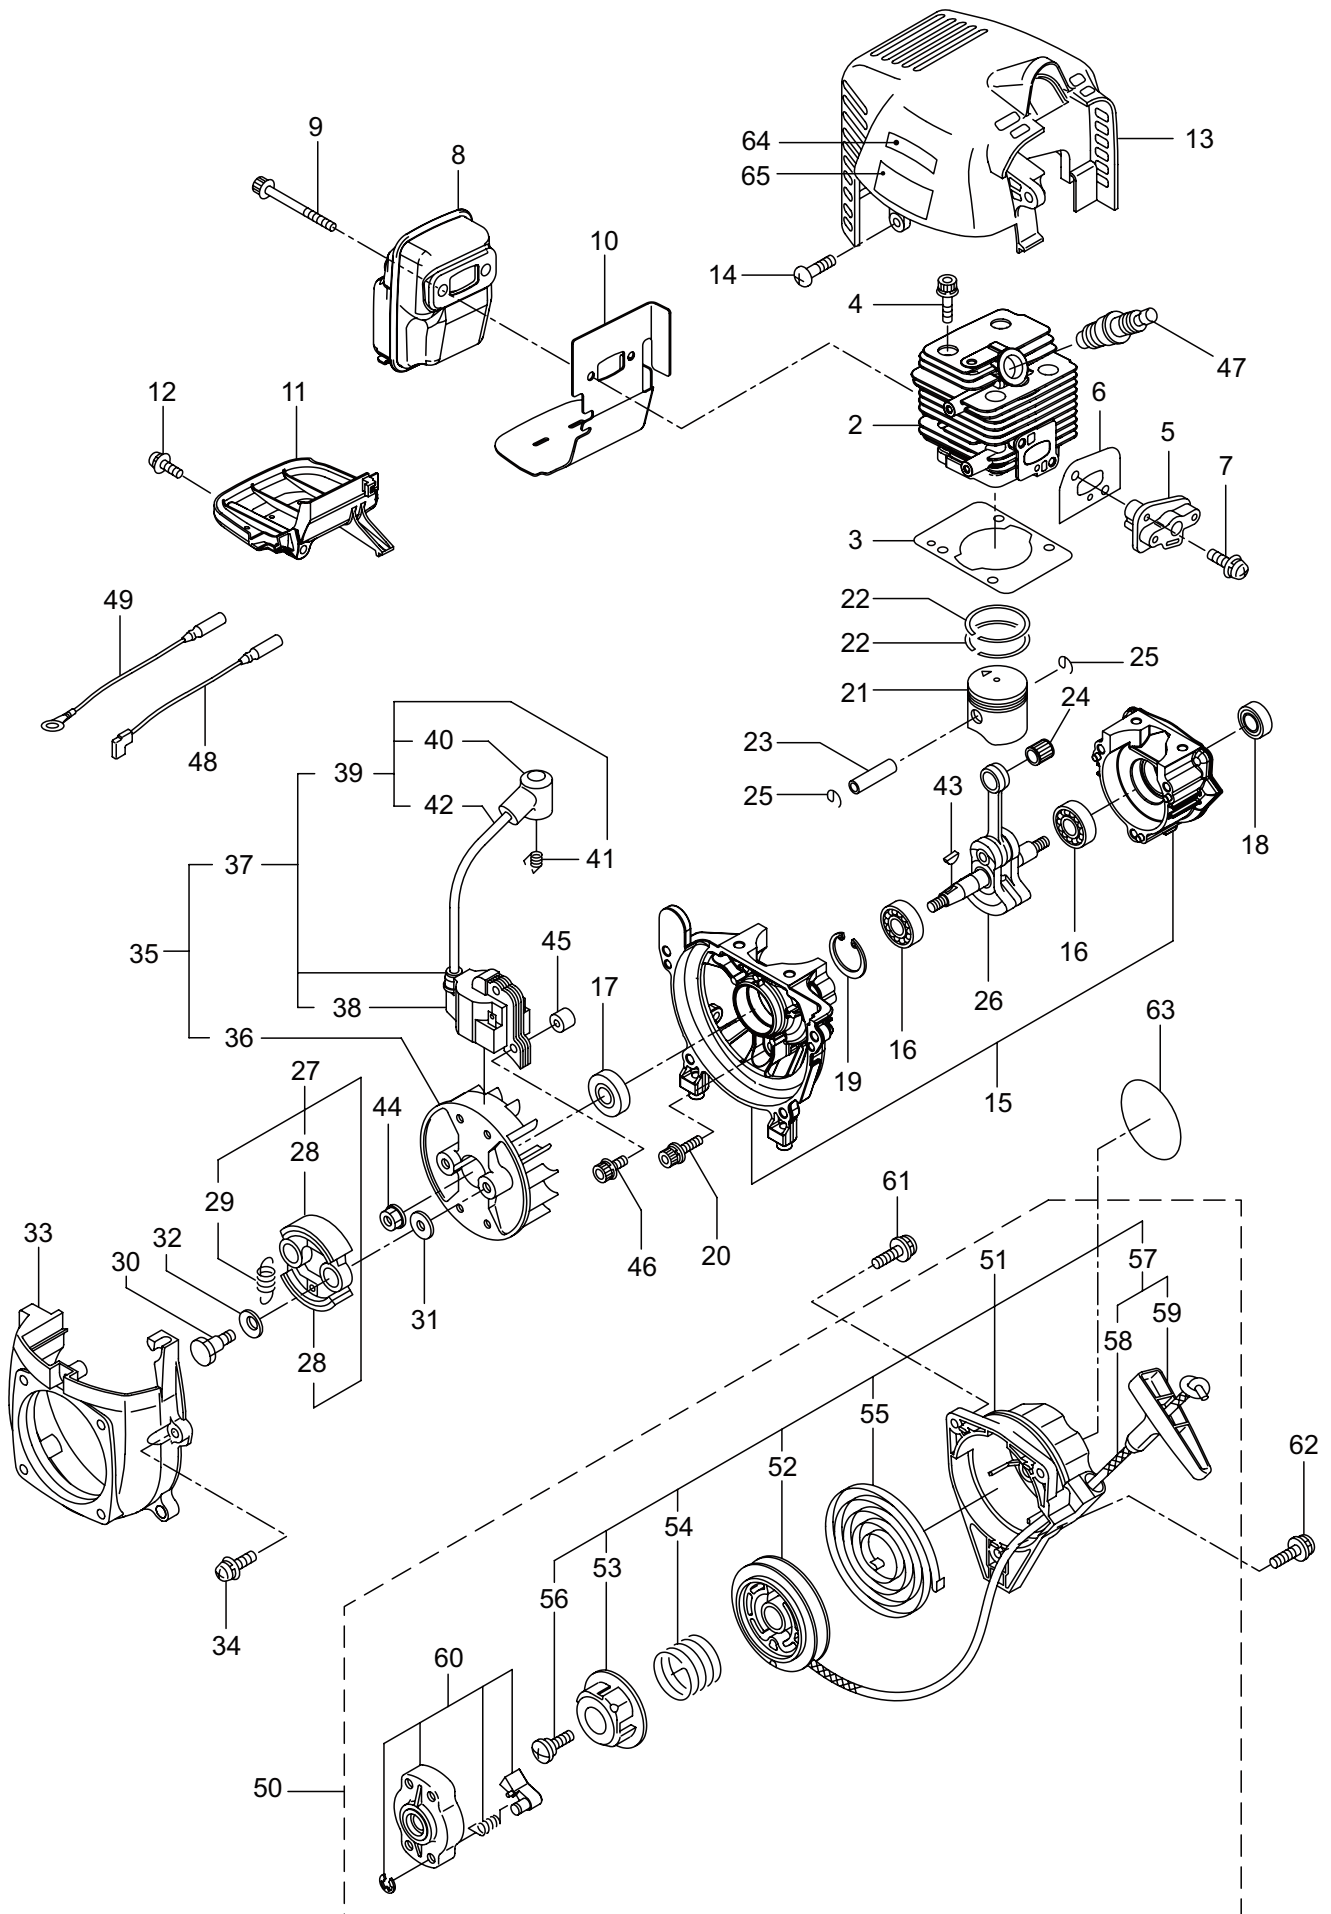












Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-46	261256	Cap Screw	2	M4x25
2-47	288264	Spark Plug	1	BPMP8Y
2-48	267492	Lead	1	130L
2-49	282880	Wire, Lead	1	
2-50	282404	Recoil Starter Ass'y	1	Incl.51-60
2-51	282405	Recoil Ass'y	1	Incl.52-59
2-52	283411	Reel	1	
2-53	283412	Cam Plate	1	
2-54	280930	Spring	1	
2-55	280931	Spiral Spring	1	
2-56	267213	Screw	1	
2-57	280932	Starter Rope Ass'y	1	Incl.58,59
2-58	280933	Starter Rope	1	
2-59	267219	Starter Grip	1	
2-60	280934	Starter Pawl Ass'y	1	
2-61	280489	Screw	2	M4x20
2-62	269833	Screw	1	M4x16
2-63	276330	Label	1	
2-64	284587	Label	1	
2-65	286122	Label	1	MARUYAMA

3. MC2630RS  
CARBURETOR, FUEL TANK

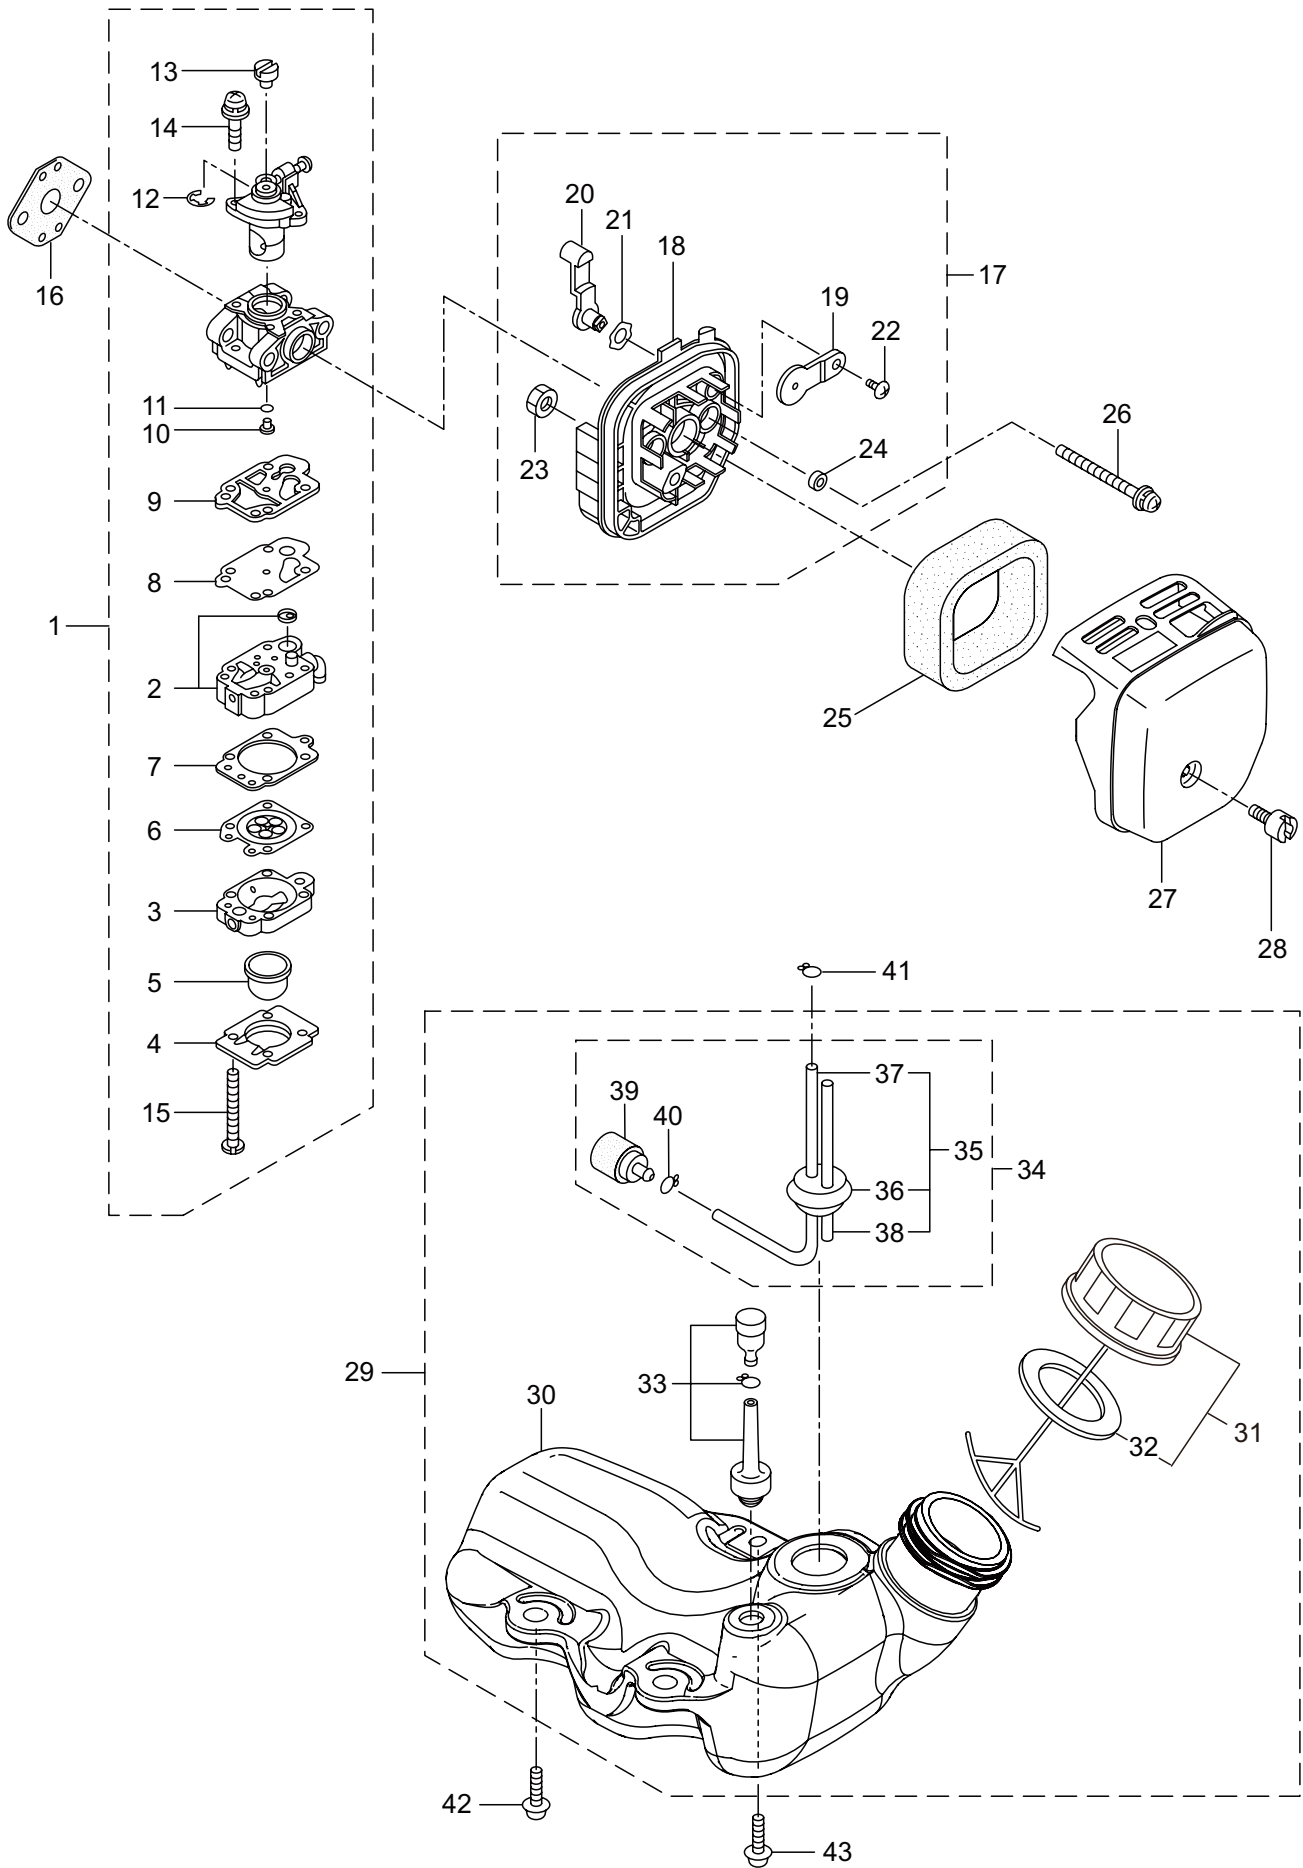

Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	276328	Carburetor Ass'y	1	Incl.2-15
3-2	281597	Pump Body	1	
3-3	262991	Purge Body	1	
3-4	262992	Cover Plate	1	
3-5	261874	Primer Bulb	1	
3-6	283905	Diaphragm, Meterring	1	
3-7	262993	Gasket	1	
3-8	262994	Diaphragm,Fuel Pump	1	
3-9	282576	Gasket	1	
3-10	285030	Main Jet	1	
3-11	261871	O-Ring	1	
3-12	261876	E-Ring	1	
3-13	261658	Swivel	1	
3-14	264682	Screw	2	
3-15	262996	Screw	4	
3-16	261864	Gasket	1	
3-17	289048	Case Ass'y	1	Incl.18-24
3-18	269050	Case Body	1	
3-19	289019	Valve	1	
3-20	284803	Lever	1	
3-21	284816	Washer	1	6.4x11x0.15
3-22	269032	Screw	1	
3-23	126993	Nut	1	M5
3-24	269051	Sleeve	2	
3-25	269030	Element	1	
3-26	281777	Screw	2	M5x55
3-27	269580	Cleaner Cover	1	
3-28	269031	Screw	1	M5x12
3-29	276310	Fuel Tank Ass'y	1	Incl.30-40
3-30	273467	Fuel Tank	1	
3-31	275306	Fuel Tank Cap Ass'y	1	Incl.41
3-32	274875	Gasket	1	
3-33	261696	Breather Ass'y	1	
3-34	265752	Fuel Pipe Pick-up Ass'y	1	Incl.35-40
3-35	264031	Fuel Pipe Ass'y	1	Incl.36-38
3-36	261115	Grommet	1	
3-37	261690	Fuel Pipe	1	160L
3-38	263038	Return Pipe	1	3x6x85L
3-39	264653	Filter Ass'y	1	
3-40	261117	Clip	1	
3-41	261117	Clip	1	
3-42	269828	Screw	2	M5x16
3-43	281208	Screw	1	M5x16

#### 4. MC2630RS ACCESSORIES

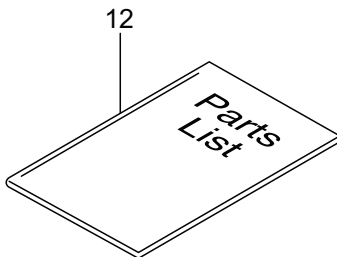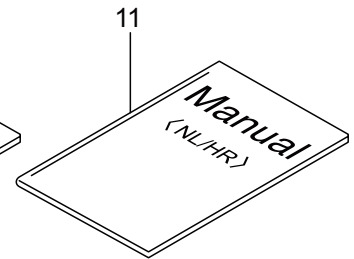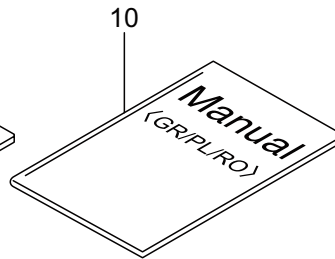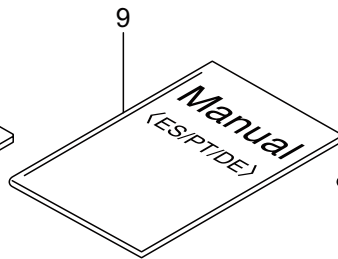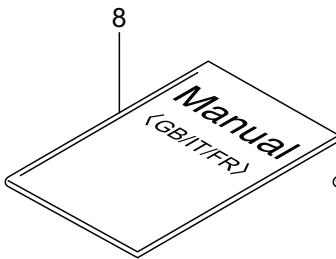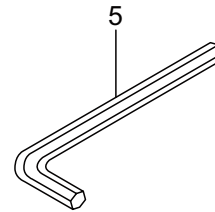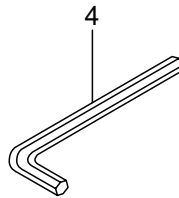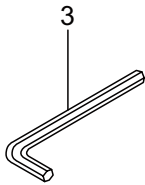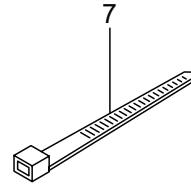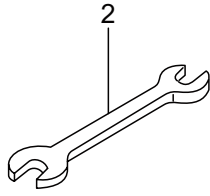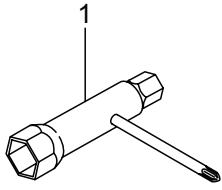

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	210418	Box Spanner	1	13x19x(+)
4-2	022865	Double-ended Wrench	1	8x10
4-3	219431	Wrench	1	3mm
4-4	219432	Wrench	1	4mm
4-5	219433	Wrench	1	5mm
4-6	234954	Colgate Tube	1	60L
4-7	234955	Band	1	3.4x145L
4-8	237671	Instruction Manual	1	GB/IT/FR
4-9	237672	Instruction Manual	1	ES/PT/DE
4-10	237673	Instruction Manual	1	GR/PL/RO
4-11	238130	Instruction Manual	1	NL/HR
4-12	524179	Parts List	1	MC2630RS